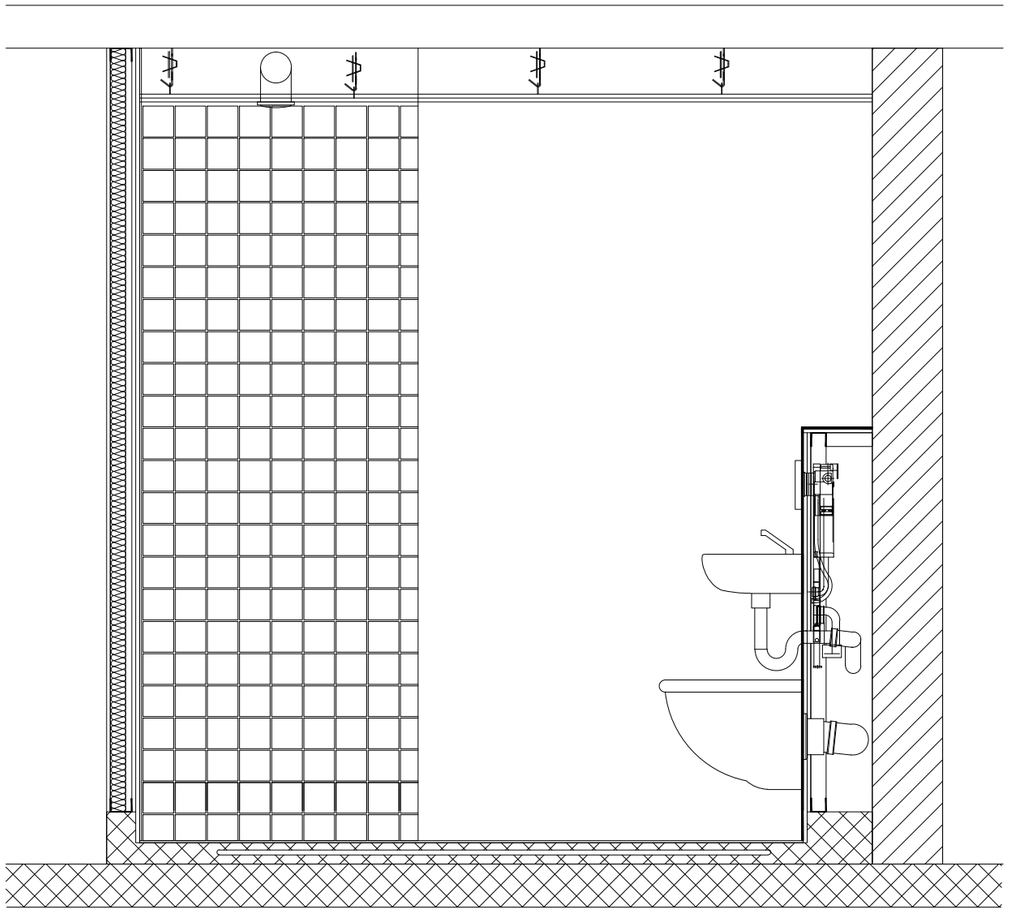

SECTION B-B SCALE 1:20

NOTES

Board fixing - double layer

- O Fix boards with decorative side out to receive joint treatment or a skim plaster finish.
- O Lightly butt boards together. Never force boards into position.
- O Install fixings not closer than 13mm from cut edges and 10mm from bound edges.
- O Position cut edges to internal angles whenever possible, removing paper burrs with fine sandpaper.
- O Stagger horizontal and vertical board joints between layers by a minimum of 600mm.
- O Locate boards to the centre line of framing where this supports board edges or ends.

- Inner layers plasterboard should be fixed with 25mm drywalls around the perimeter of the board at 300mm centers, and at the intermediate stud at 600mm centers.
- Cut and fix the initial second layer board as appropriate so that subsequent board joints are staggered.
- Where the partition height exceeds the board length, install strap progressively between board layers, to coincide with outer layer horizontal board end joints, to maintain board alignment.

Project name and address wetroom section 5th Semester project Moldevej 29-39 Vejle	Description	Scale 1:20
T.E.A.M Architectural	Project No	Revision
	Drawing type	Revision number
	Designer	Drawn by AGNIESZKA KRASUSKA